



Heating Capacity - 21,200 to 55,500 Btuh

# MODEL NUMBER IDENTIFICATION

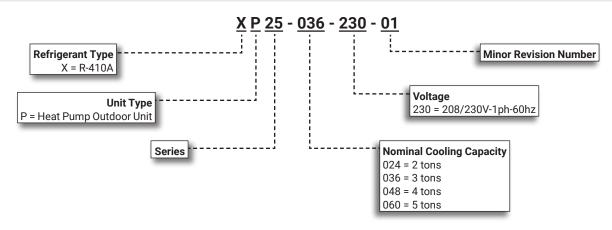

\* iComfort® S30 Ultra-Smart Wi-Fi Communicating Thermostat required. Not furnished - Order separately.

# **FEATURE HIGHLIGHTS**

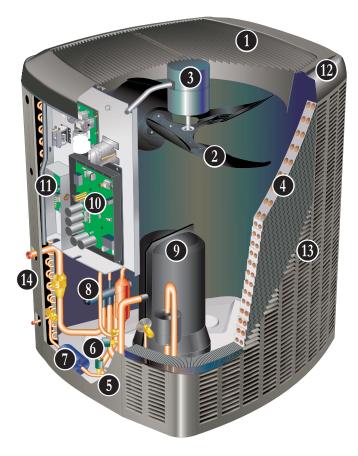

- 1. Outdoor Coil Fan with SilentComfort<sup>™</sup> Technology
- 2. Direct Drive Fan
- 3. Variable-Speed Outdoor Coil Fan Motor With Integrated Control
- 4. Copper Tube / Enhanced Fin Coil
- 5. High Pressure Switch
- 6. Low Pressure Switch
- 7. High Capacity Liquid Line Drier
- 8. Four-Way Reversing Valve
- 9. Variable Capacity Scroll Compressor
- 10. DC Inverter Control
- 11. iComfort<sup>®</sup> Communicating Control
- 12. Heavy Gauge Steel Cabinet
- 13. SmartHinge<sup>™</sup> Louvered Coil Protection
- 14. Refrigerant Line Connections and Access

# CONTENTS

Approvals and Warranty
Dimensions - Unit
Electrical Data
Features
Field Wiring
Installation Clearances
Model Number Identification.
Optional Accessories - Order Separately
Sound Data
Specifications
TXV Usage

# APPROVALS AND WARRANTY

# APPROVALS

- AHRI Certified to AHRI Standard 210/240
- For AHRI Certified system match-ups and expanded ratings, visit www.LennoxPROs.com
- ENERGY STAR<sup>®</sup> certified
- Sound rated to AHRI Standard 270-2008 test conditions
- Tested in the Lennox Research Laboratory environmental test room
- Rated according to U.S. Department of Energy (DOE) test procedures
- · Units and components UL and CEC bonded for grounding to meet safety standards for servicing
- ETL certified (U.S. and Canada)
- ISO 9001 Registered Manufacturing Quality System

# WARRANTY

- · Compressor:
  - Limited ten years in residential installations
- · Limited five years in non-residential installations
- All other covered components:
  - Limited five years in residential installations
- · Limited one year in non-residential installations

NOTE - Refer to Lennox Equipment Limited Warranty certificate included with unit for specific details.

# **FEATURES**

# APPLICATIONS

- 2 through 5 ton
- Sound levels as low as 58 dBA
- Single phase power supply
- Vertical air discharge
- Applicable to indoor air handlers or gas furnaces with indoor add-on coils
- Shipped completely factory assembled, piped, and wired
- **NOTE** When heat pumps are used with gas furnaces, a dual-fuel compatible thermostat or a zone control system with dual-fuel capabilities must be used (order separately).
- **NOTE** Installer must set heat pump, connect refrigerant lines, and make electrical connections to complete job.
- **NOTE** The XP25 heat pump can only be matched with iComfort® Communicating variable-speed indoor furnaces and air handlers.

## **REFRIGERATION SYSTEM**

## R-410A Refrigerant

- Non-chlorine, ozone friendly
- Unit is factory pre-charged
- **NOTE** Total system refrigerant charge is dependant on outdoor unit size, indoor unit size and refrigerant line length.
- NOTE Refer to the unit-mounted charging sticker to determine correct amount of charge required.



1 Outdoor Coil Fan with SilentComfort<sup>™</sup> Technology

- Specially-designed, SilentComfort<sup>™</sup> fan guard uses Passive Vortex Suppression to reduce air noise. Constructed of corrosion-resistant PVC (polyvinyl chloride) coated steel
- Direct drive fan moves large air volumes uniformly through entire condenser coil for high refrigerant cooling capacity
  - Vertical air discharge
  - Fan service access accomplished by removal of fan guard
- 3 Variable-Speed Outdoor Coil Fan Motor With Integrated Control
  - · Programmed for variable capacity operation
  - Fan speed is directly controlled by the iComfort<sup>®</sup> communications between the outdoor unit iComfort® control and the iComfort® thermostat
  - Fan motor is inherently protected
  - · Totally enclosed fan motor

## **REFRIGERATION SYSTEM (continued)**

#### 4 Copper Tube/Enhanced Fin Coil

- Lennox designed and fabricated coil
- Ripple-edged aluminum fins
- Copper tube construction
- Lanced fins for maximum fin surface exposure
- · Fin collars grip tubing for maximum contact area
- Flared shoulder tubing connections
- Silver soldering construction
- Factory tested under high pressure
- Entire coil is accessible for cleaning

#### Check/Expansion Valve - Outdoor Unit

- Designed and sized for heat pump systems
- Sensing bulb is located on the suction line

#### **Discharge Temperature Switch**

- Shuts off unit if operating conditions cause the compressor discharge line temperature to rise above setpoint
- Protects compressor from excessive pressure / temperature
- · Automatic reset when temperature drops below setpoint

#### 5 High Pressure Switch

- · Protects the system from high pressure conditions
- Automatic reset

## 6 Low Pressure Switch

- · Shuts off unit if suction pressure falls below setting
- Loss of charge and freeze-up protection
- Automatic reset

## High Capacity Liquid Line Drier

- Factory installed in the liquid line
- Drier traps moisture or dirt
- 100% molecular-sieve, bead type, bi-flow drier

#### 8 Four-Way Reversing Valve

- Rapid changeover of refrigerant flow direction from cooling to heating and vice versa
- Operates on pressure differential between outdoor unit and indoor coil
- Factory installed

# Charge Compensator (036 model only)

• Maintains the proper amount of refrigerant circulating in the system during heating mode

#### **Optional Accessories**

#### Check/Expansion Valve Kits

- Field installed on certain indoor units
- See TXV Usage table
- Chatleff-style fitting

#### Freezestat

- · Senses suction line temperature
- Cycles compressor off when suction line temperature falls below it's setpoint
- Opens at 29°F and closes at 58°F
- Installs on or near the discharge line of the evaporator or on the suction line

#### **Refrigerant Line Kits**

- · Refrigerant lines are shipped refrigeration clean
- Lines are cleaned, dried, pressurized and sealed at factory
- · Suction line fully insulated
- · Lines are stubbed at both ends
- **NOTE** The XP25 is a variable capacity heat pump utilizing variable speed compressor technology. With the variable speed compressor and variable pumping capacity, additional consideration must be given to refrigerant piping sizing and application.

Please refer to the Installation Instructions or Service Literature for Line Set Requirements and Refrigerant Piping Guidelines.

## PRECISE COMFORT® TECHNOLOGY

The Variable Capacity Compressor and DC Inverter Control is an integrated system that operates together to reduce overall energy usage when compared to conventional air conditioners.

#### 9 Variable Capacity Scroll Compressor

- Operates on a variable frequency determined by the DC Inverter Control to vary capacity based on the cooling or heating load required
- High volumetric
  efficiency
- Uniform suction flow
- Constant discharge flow
- Quiet operation

#### **Compressor Operation**

- Two involute spiral scrolls matched together generate a series of crescent shaped gas pockets between them
- During compression, one scroll remains stationary while the other scroll orbits around it
- Gas is drawn into the outer pocket, the pocket is sealed as the scroll rotates
- As the spiral movement continues, gas pockets are pushed to the center of the scrolls
- · Volume between the pockets is simultaneously reduced
- When the pocket reaches the center, gas is now at high pressure and is forced out of a port located in the center of the fixed scrolls
- During compression, several pockets are compressed simultaneously resulting in a smooth continuous compression cycle
- Continuous flank contact, maintained by centrifugal force, minimizes gas leakage and maximizes efficiency
- Compressor is tolerant to the effects of slugging and contaminants

#### Top Cap Thermal Sensor Switch

- Located on top of the compressor casing
- Discontinues compressor operation in case of abnormal operating conditions

#### Compressor Sound Dampening System

- A polyethylene compressor cover containing a 2 inch thick batt of fiberglass insulation for better sound dampening
- All open edges are sealed with a one-inch wide hook and loop fastening tape

#### Crankcase Heater

 Crankcase heater prevents migration of liquid refrigerant into compressor and ensures proper compressor lubrication



## **DC** Inverter Control

- Converts AC line voltage into filtered variable DC voltage
- Provides continuous compressor operation, while adjusting the capacity according to indoor temperature
- Adjusts compressor output in increments as small as 1%
- The accurate sensing of cooling or heating load prevents frequent changes in capacity and ensures efficient, economical operation



- Power Factor Correction (PFC) circuit monitors the DC bus for high, low and abnormal voltage conditions to protect the compressor
- Two LEDS (red and green) indicate inverter operating status and aid in troubleshooting
- Noise filter reduces unwanted electromagnetic interference (EMI)
- Integrated on the iComfort Communicating Control for 024 and 036 models,
- Separate external inverter control for 048 and 060 models
- The inverter reactor (mounted separately) adds inductance to the line between the inverter and the compressor to limit current rise and protect the compressor

#### CONTROLS

- **11** iComfort<sup>®</sup> Communicating Control
  - Advanced control communicates information about various operating parameters in the air conditioner to the iComfort<sup>®</sup> Communicating Thermostats to constantly maintain the highest level of comfort, performance and efficiency available



- Auto Configuration On start-up the control automatically sends a description of the unit to the iComfort<sup>®</sup> Communicating Thermostat to automatically configure the features available
- · Control also features:
  - Seven-Segment Display shows information about outdoor unit type and capacity and also displays alerts for common fault conditions (electrical and mechanical)
  - Low voltage protection prevents compressor operation when voltage is not within the specified range
  - Compressor defrost shift delay Adjustable 0 (factory) or 30 seconds
  - Demand defrost using outdoor ambient air temperature, coil temperature and compressor runtime inputs. 14 minute maximum defrost time
  - Selectable defrost termination temperature 50, 70, 90 or 100°F. Default setting is 50°F
  - High and low pressure switch monitoring with provisions for lockout
  - Five-Strike lockout protection protects compressor
  - Discharge line temperature and outdoor air temperature monitoring
  - · EEPROM storage of all local configurations
  - Non-volatile memory storage of 100 alarm codes with display of last 10 codes for troubleshooting
  - Built-in low ambient control

#### Low Ambient Operation

- Cooling Mode The heat pump can operate down to 0°F outdoor air temperature in the cooling mode.
- **NOTE** A freezestat is recommended for extra protection during low ambient cooling operation.
  - Heating Mode (Low Temperature Protection) -Outdoor unit will not operate in the heating mode when the outdoor temperature is at or below  $-4^{\circ}$ F. If the unit is operating and the outdoor temperature drops below  $-4^{\circ}$ F, the unit will continue to operate until the room thermostat is satisfied or the outdoor temperature drops to  $-15^{\circ}$ F.

#### Climate IQ<sup>™</sup> Technology

Optimizes dehumidification settings for specific climates to improve home comfort during cooling or heating operation.

#### iComfort Wi-Fi<sup>®</sup> Thermostat Settings: Cooling Mode

Three climate settings are available:

- Dry The system supplies higher indoor airflow at all compressor capacities, increasing efficiency by operating at a higher sensible to total ratio.
- Moderate The system supplies indoor airflow that balances efficiency and comfort.
- Humid The system supplies lower indoor airflow at all compressor capacities, improving humidity removal by operating at a lower sensible to total ratio.

#### Heating Mode

Two climate settings are available:

- Comfort The system reduces indoor airflow, increasing supply air temperature
- · Normal Standard system operation

iComfort® S30 Thermostat Setting:

• Climate IQ (Auto) - Dry, Normal, Basic and Humid modes are automatically set based on the difference between the measured relative humidity and the relative humidity setting.

All modes are selected on the iComfort® Communicating Thermostat.

#### Outdoor Air Temperature Sensor

- Used with iComfort® Communicating Thermostats
- · Sensor is auto-detected when connected to thermostat

## **REQUIRED COMPONENTS**

**NOTE** - The XP25 Air Conditioner can only be used with an iComfort<sup>®</sup> Communicating Thermostat.

# iComfort® S30 Ultra-Smart Wi-Fi Thermostat (part of the iComfort® Residential Communicating Control System)

 Recognizes and connects to all iComfort<sup>®</sup> Communicating products to automatically configure

and control the heating/ cooling system (based on user-specified settings) for the highest level of comfort, performance and efficiency



efficiencyRecognizes model and serial number

information for iComfort® Communicating products to simplify system setup

- Wi-Fi remote temperature monitoring and adjustment through a home wireless network for desktop PCs, laptops and apps for smartphones or tablets
- Smart home automation compatible with Apple HomeKit<sup>™</sup>, Amazon Alexa<sup>®</sup>, Google Assistant and IFTTT
- Service alerts and reminders sent via text message or e-mail
- Dealer Dashboard features online real-time monitoring of installed iComfort<sup>®</sup> Communicating systems
- Simple easy-to-use touchscreen allows complete system configuration
- Scheduled maintenance alerts, system warnings and troubleshooting are also displayed on thermostat screen
- Easy to read 7 inch high definition color display (measured diagonally)
- Installer setup screens allow quick and simple system configuration without a manual, Installer can also run tests on complete system or individual components for easy maintenance and troubleshooting
- Serial communications bus (RSBus), with less wiring than a conventional heating/cooling system, allows system communication
- · Uses 4-wire, 18-gauge standard thermostat wiring
- High Definition Color Display with Subbase, Smart Hub Controller, wallplate (for retrofit installations) furnished for easy installation
- **NOTE** See the iComfort<sup>®</sup> S30 Thermostat Product Specifications bulletin in the Controls section for more information.

# CABINET

- 12 · Heavy-gauge steel construction
  - Pre-painted cabinet finish
  - Control box is conveniently located with all controls factory wired
  - · Large removable panel provides service access
  - Drainage holes are provided in base section for moisture removal
  - High density polyethylene unit support feet raise the unit off of the mounting surface, away from damaging moisture

#### PermaGuard<sup>™</sup> Unit Base

Durable zinc-coated base section resists rust and corrosion

# B SmartHinge<sup>™</sup> Louvered Coil Protection

- Steel louvered panels provides complete coil protection
- Panels are hinged to allow easy cleaning and servicing of coils
- Panels may be completely removed
- Interlocking tabs and slots assure tight fit on cabinet.
- 14 Refrigerant Line Connections, Electrical Inlets and Service Valves
  - Sweat connection suction and liquid lines
  - · Located on corner of unit cabinet
  - Suction valve can be fully shut off, while liquid valve may be front seated to manage refrigerant charge while servicing system
  - Refrigerant line connections and field wiring inlets are located in one central area of the cabinet
  - See dimension drawing

## **Optional Accessories**

#### Snow Guard

- For use in locations where the possibility of heavy snow or freezing rain accumulation may occur
- Heavy gauge powder coated steel guard
- Deflects snow and ice away from the outdoor fan

SPECIFIC	ATIONS					
General	Model No.	XP25-024	XP25-036	XP25-048	XP25-060	
Data	Nominal Tonnage	2	3	4	5	
Connections	Liquid line (o.d.) - in.	3/8	3/8	3/8	3/8	
(sweat)	Vapor line (o.d.) - in.	7/8	7/8	7/8	1-1/8	
Refrigerant	<sup>1</sup> R-410A charge furnished	11 lbs. 5 oz.	13 lbs. 1 oz.	13 lbs. 14 oz.	13 lbs. 0 oz.	
Outdoor	Net face area - sq. ft. Outer coil	20.73	20.73	27.21	27.21	
Coil	Inner Coil	20.08	20.08	26.36	26.36	
	Tube diameter - in.	5/16	5/16	5/16	5/16	
	No. of rows	2	2	2	2	
	Fins per inch	22	22	22	22	
Outdoor	Diameter - in.	26	26	26	26	
Fan	No. of blades	3	3	3	3	
	Motor hp (W)	1/3	1/3	1/3	1/3	
	Cfm - Max. Speed	2580	4130	4040	4240	
	Min. Speed	1845	1865	3315	3025	
	Rpm - Max. Speed	723	850	805	845	
	Min. Speed	515	390	658	600	
	Watts - Max. Speed	70	214	172	198	
	Min .Speed	32	40	98	76	
Shipping Data	- lbs 1 pkg.	277	277	341	335	
ELECTRICAL	DATA					
Line voltage da	ata - 60hz	208/230V-1ph	208/230V-1ph	208/230V-1ph	208/230V-1ph	
<sup>2</sup> Maximum ove	ercurrent protection (amps)	25	30	50	50	
<sup>3</sup> Minimum circ	uit ampacity	15.7	20.3	33.7	34.9	
Compressor	Rated load amps	10.3	14.0	24.7	25.7	
	Locked rotor amps	18	18	29	29	
	Power factor	0.98	0.98	0.99	0.99	
Outdoor Coil F	an Motor - Full load amps	2.8	2.8	2.8	2.8	
REQUIRED CO	MPONENTS - ORDER SEPARATE	LY	'	'		
iComfort <sup>®</sup> S30 Thermostat	Ultra-Smart Wi-Fi 12U67	•	• •		•	
<sup>4</sup> Discharge Ter	mperature Sensor 88K38	•	•	•	•	
OPTIONAL AC	CCESSORIES - ORDER SEPARATE	LY				
<sup>5</sup> Freezestat	3/8 in. tubing 93G35	•	•	•	•	
	5/8 in. tubing 50A93	•	•	•	•	
<sup>6</sup> Refrigerant Line Sets	L15-65-30 L15-65-40 L15-65-50	٠	•	•		
	Field Fabricate				•	

NOTE - Extremes of operating range are plus 10% and minus 5% of line voltage.

<sup>1</sup> Refrigerant charge sufficient for 15 ft. length of refrigerant lines. For longer line set requirements see the Installation Instructions for information about line set length and additional refrigerant charge required.

<sup>2</sup> HACR type breaker or fuse.

<sup>3</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.


 $^{\rm 4}$  Used with the iComfort  $^{\scriptscriptstyle \odot}$  Communicating Thermostats for optional service diagnostics.

<sup>5</sup> Freezestat is recommended for Low Ambient operation.

<sup>6</sup> Refer to the Installation Instructions or Service Literature for Line Set Requirements and Refrigerant Piping Guidelines.

<sup>7</sup> Adds 11-1/2 inches (292 mm) to unit height,

## **DIMENSIONS - UNIT**

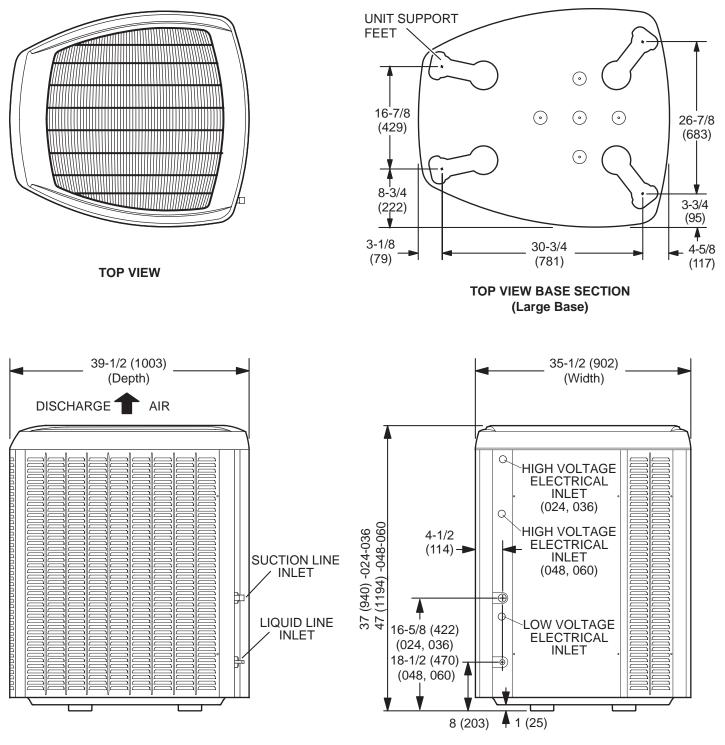

SIDE VIEW

ACCESS VIEW

SOUND DATA													
<sup>1</sup> Unit	Octave Band Sound Power Levels dBA, re 10 <sup>-12</sup> Watts Center Frequency - HZ						<sup>1</sup> Sound Rating	<sup>2</sup> Estimated Sound Pressure Level at Distance From Unit (dBA at distance in ft.)					
Model	125	250	500	1000	2000	4000	8000	Number (dBA)	3	5	10	15	50
024 Min.	49	46.3	47.6	45.1	40.3	38.3	34.8	58	51	46	40	37	26
024 Max.	52.2	54.6	55.3	51.8	49.6	45.9	39	68	61	56	50	47	36
036 Min.	47.5	46.1	42.8	42.1	35.8	36.5	32.6	58	51	46	40	37	26
036 Max.	59.7	63.5	63	59.2	54.4	49.7	42.7	73	66	61	55	52	41
048 Min.	50.9	52.8	55.5	50.9	46.6	40.6	39.4	64	57	52	46	43	32
048 Max.	58	59	59.2	57.1	53.3	50.2	44	74	67	62	56	53	42
060 Min.	51.7	51.6	53.9	49.7	44.1	38.5	38.2	64	57	52	46	43	32
060 Max.	56.6	60	62.1	57.7	53.8	48.4	42.6	74	67	62	56	53	42

NOTE - the octave sound power data does not include tonal correction.

<sup>1</sup> Tested according to AHRI Standard 270-2008 test conditions. "SRN" is the overall A-Weighted Sound Power Level, (LWA), dBA (100 Hz to 10,000 Hz).

<sup>2</sup> Estimated sound pressure level at distance based on AHRI Standard 275-2010 method for equipment located on the ground, roof, or on side of building wall with no adjacent reflective surface within 9.8 feet. Sound pressure levels will increase based on changes to assumptions. For other applications, refer to AHRI Standard 275.


# INSTALLATION CLEARANCES

The remaining side may be 6 in. (152 mm).


Service Clearance - 30 in. (762 mm)

48 in. (1219 mm) clearance required on top of unit

24 in. (610 mm) required between two units

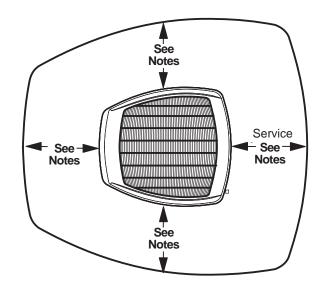

## FIELD WIRING

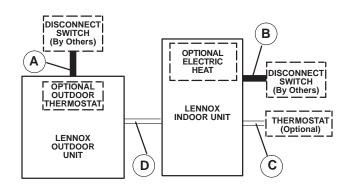

- A Two Wire Power
- B Two or Three Wire Power (size to heater capacity)
- C iComfort® Communicating Thermostat:
  - Four Wire, 18AWG (RSBus)
- D iComfort® Communicating Thermostat:
  - Two Wire, **18AWG** (RSBus) unshielded thermostat cable for low voltage **Smart Hub power terminals** (R, C, + and -)
  - Two Wire, **18 to 22AWG** (RSBus) shielded thermostat cable recommended for **Smart Hub communications terminals** (I+, I-, A and B)
- NOTE All wiring must conform to NEC or CEC and local electrical codes.
- NOTE Field wiring is not furnished.

**NOTE** - One of these three sides must be 36 in. (914 mm). One of the two remaining sides may be 12 in. (305 mm).

# **TXV USAGE**

# Use this table for C35, CH23, CH35 and CR33 Field Installed TXV Match-Ups.

Model No.	Order No.
XP25-024	12J18
XP25-036	12J19
XP25-048	12J20
XP25-060	12J20

CX35 and CHX35 coils and all Lennox air handlers are shipped with a factory installed TXV.

C35 and CH35 coils - Replace the factory installed RFC orifice with the expansion valve listed.

CH23 and CR33 - Use the expansion valve listed.

# AHRI STANDARD 210/240

Cooling or heating capacities are net values, including the effects of blower motor heat, and do not include supplementary heat. Power input is the total power input to the compressor(s) and fan(s), plus any controls and other items required as part of the system for normal operation.

Units which do not have an indoor air-circulating blower furnished as part of the model, i.e., split system with indoor coil only, is established by subtracting from the total cooling capacity 1250 Btu/h per 1,000 cfm, and by adding the same amount to the heating capacity. Total power input for both heating and cooling is increased by 365 W per 1,000 cfm of indoor air circulated.

# REVISIONS

Sections	Description of Change				
Features	Added Charge Compensator for 036 model only.				
Specifications	Refrigerant charge updated for 036 model only.				









Visit us at <u>www.lennox.com</u> For the latest technical information, <u>www.LennoxPros.com</u> Contact us at 1-800-4-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability. Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury. Installation and service must be performed by a qualified installer and servicing agency.